

The logo for the M2 Beē MESH Node. It features the text "M2 Beē" in a bold, sans-serif font, with a Wi-Fi symbol above the "ē". Below this, the text "MESH Node" is written in a smaller, all-caps, sans-serif font. The logo is centered within a white circular outline.

M2 Beē
MESH Node

The text "Set-up Guide" is written in a bold, sans-serif font. It is positioned to the right of the M2 Beē logo, separated by a vertical line. The text is centered within a white circular outline.

**Set-up
Guide**

Thank you for choosing the Mercku M2 Bee mesh node

Set-up in 3 steps



! You need a working M2 router
to use the M2 Bee mesh node.

Need help setting up your M2 router?
Please scan this QR code:


Or visit: www.mercku.tech/help



Set-up Guide


1. Download the app

Please [download](#) the Mercku app, log into the app and bind it with the host router.

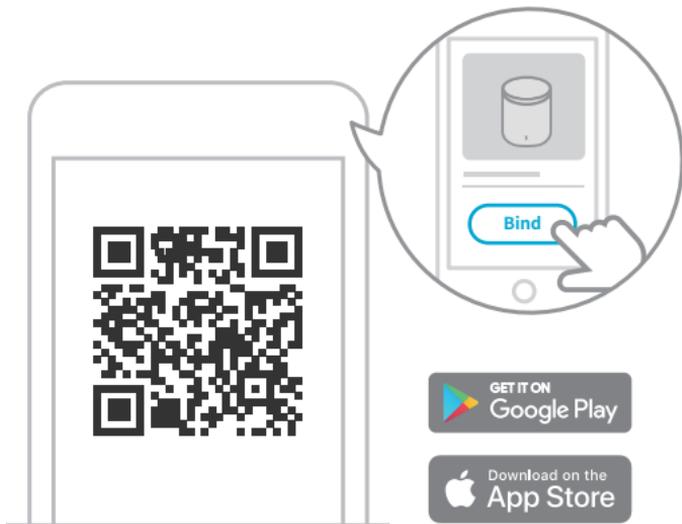

2. Add a Bee node


Open the Mercku app and access the “My Wi-Fi” section and click “+”.

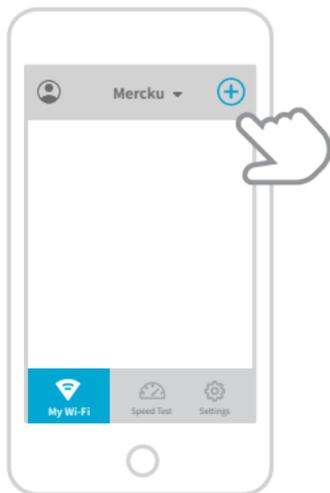


2


3. Plug in the Bee node

Plug the Bee node into the socket and click the reset button (red button). When the indicator light turns red and blinks, click “Add node” on the app to finish the setup process.

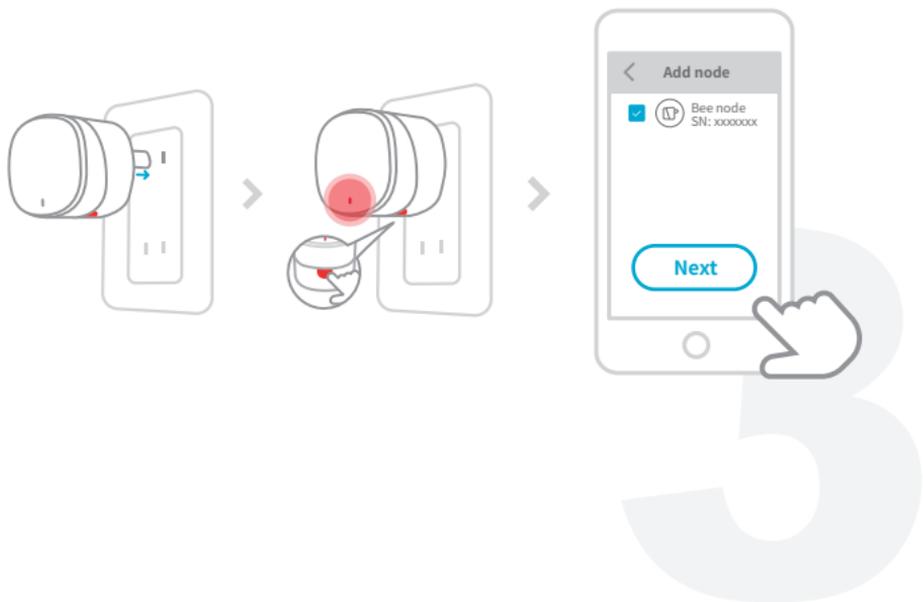


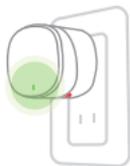

- After the mesh system is created successfully, the Bee node's indicator light will turn green and stop blinking.

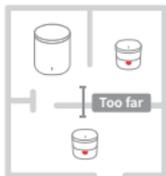

- If the Bee node's indicator light blinks, it means that the signal is weak. Please move the Bee node closer to the other nodes (Bees or M2s) in the mesh network.

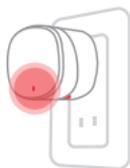

- If the Bee node fails to connect to the mesh system or there is no internet, the Bee's indicator light will be red and steady. Please check the setup information on your app's interface or the network status of M2 host router.