

Paging

1. Configure the **send party**.

You can regard the line keys, memory keys as the Paging key. As the below picture.

| Key | Mode | Account | Name | Number |
|-------|--------|----------|------|-----------------|
| Key1: | Line | Account1 | | |
| Key2: | Line | Account1 | | |
| Key3: | Paging | Account1 | 1111 | 225.5.5.6:10000 |

2. Configure the **receive party**.

2.1 Normal IP Phone

Paging 1: ☐ off ☒ on
Group IP: 225.5.5.6 Port: 10000

Paging 2: ☐ off ☒ on
Group IP: 225.5.5.7 Port: 10000

2.2 The IP Speaker Phone(PS760)

Paging 1: ☐ off ☒ on
Group IP: 225.5.5.5 Port: 2008

Paging 2: ☒ off ☐ on
Group IP: 226.5.5.5 Port: 2009

Paging 3: ☒ off ☐ on
Group IP: Port: 10000

Paging 4: ☒ off ☐ on
Group IP: Port: 10000

Paging 5: ☒ off ☐ on
Group IP: Port: 10000

Paging 6: ☒ off ☐ on
Group IP: Port: 10000

Paging 7: ☒ off ☐ on
Group IP: Port: 10000

3. Just press the paging key in the send party phone to broad-cast the voice.