


VS-GWM401G used in VS-GW1600 v1 chassis

Plug the computer into the ETH2 Port with a network cable.

Change PC to static IP address

- IP address: 172.16.98.22
- Subnet mask: 255.255.0.0
- Default gateway: 172.16.98.0

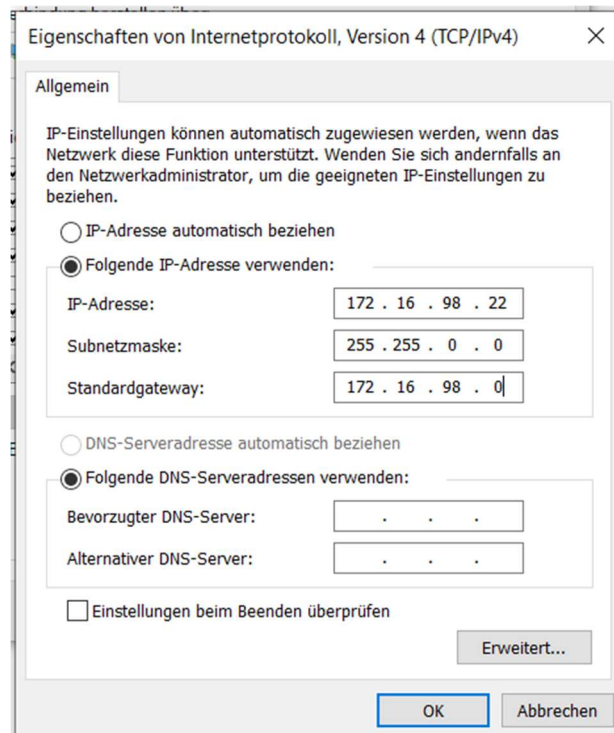

ETH2-Port:


Access different Boards with different IP address

ETH2 IP Addresses Slot Num IP

Username: admin

Password: admin

- Slot-1: 172.16.99.1
- Slot-2: 172.16.99.2
- Slot-3: 172.16.99.3
- Slot-4: 172.16.99.4
- Slot-5: 172.16.99.5

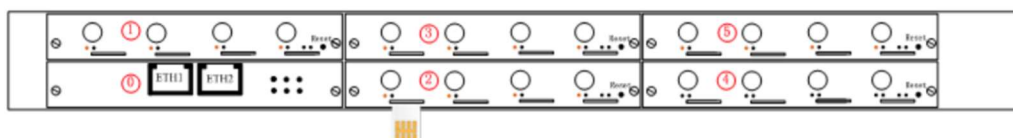

Reset GWM401G:

GWM401G has a reset button directly on the module, to the on the right of the PWR LED there is an RST button.