

# **Akuvox and Vogtec Feature Configurations**

#### **Device Model**

- Akuvox door phone E11
- VOGTEC WiFi SIP phone T2

### Video Call

- VOGTEC WiFi SIP phone T2
- 1. On the device, go to Menu>WLAN, to make the phone connect the WiFi.
- 2. Go to Menu>About, to check the SIP phone's IP address.
- 3. On the web, go to Phone>Media>Media Settings>Enable Call Video, enable it.

	Time&Date	Preference	Feature	Media	Language	
> Status	Audio Codec					
> Account	Choice 1	PCMA	Ŧ	Choice 2	PCMU V	
	Choice 3	G.729	•	Choice 4	GSM 🔻	
> Phone	Choice 5	G722	•	Choice 6	OPUS T	
	Media Setting					
Maturali	Enable Call Video:			Playload:	101	
- HELWOIK	G729AB Packaging	Time 20ms	•	User_Agent:	Vogtec	
) Directory				Apply		

#### Akuvox door phone

4. Go to web>Intercom>Basic>Push Button, to enter the IP address/SIP account of the T2 SIP phone.

Key	Number1 / 5	Number2 / 6	Number3 / 7	Number4 / 8
Push Button	192.168.35.106			

#### **Video Preview**

- VOGTEC WiFi SIP phone T2
- 1. On the web, go to Phone>Feature.
- 2. Enter the Akuvox door phone's IP address/SIP number to the VideoDoorNum.
- 3. Enter the Akuvox door phone's IP address and the RTSP port (IP address: 554) to the VideoDoorIP.

	Time&Date	Preference	re Media	Language
Status	Feature Settings			
Account	Device DND		Don't Escape '#' as %23	
- ACCOUNT	Incoming Intercom			
Dhana	Call Waiting		Call Waiting Tone	
Phone	Call Out Timeout	60 (30~120 s)	Incoming Timeout	60 (30~120 s)
a anna a	Auto Redial		Auto Redial Interval	3 (0~999 s)
Network	Auto Redial Times	3 (0~99 s)	Emergency Call Number	911
	Menu Type:	Normal 🔻		
Directory	VideoDoorNum:	192.168.35.108	VideoDoorIP:	192.168.35.108:554
	VideoDoorSign:	R20V 20.220	VideoDoorResID:	/live/ch00_0
> Maintenance			Apply	

## • Akuvox door phone

- 4. Go to web>Intercom>RTSP.
- 5. Enable the RTSP server and do not tick RTSP Authorization.

	RTSP Ba	asic
RTSP Server Enabled	Ø	
RTSP Authorization	0	
RTSP Authentication Type	Basic	Ť
RTSP User Name	admin	
RTSP Password	•••••	•
	RTSP Str	eam
RTSP Audio Enabled		
RTSP Video Enabled	V	
RTSP Video2 Enabled	•	
RTSP Audio Codec	PCMU	•
RTSP Video Codec	H.264	•

## **Unlock Via DTMF**

## • Akuvox door phone

Go to **web>Intercom>Relay,** to set the DTMF code.

			Relay		
Relay ID	RelayA	•	RelayB	•	
Relay Type	Default sta	te 🔻	Default sta	te 🔻	
Relay Delay(sec)	10	•	3	•	
DTMF Option	1 Digit DTI	MF 🔹			
DTMF	#	•	0	T	
Multiple DTMF					